





TTM-200

DIGITAL CONTROLLER



694 rue des sables 60840 BREUIL LE SEC Tel. 03 44 66 22 09 Internet www.acgs-mesure.fr E-mail: pascal@acgs-mesure.fr











TOHO ELECTRONICS INC.

CONTROLLER TTM-200

■ Features

Improvement of the controllability with new PID algorithm

①Time until it is stabilized from a control start is shortened

- ②Loading the jump less control which controls the overshoot after the disturbance
- ③You can chose from three kind of PID control that can be chosen

Full multiple inputs

Established the input specification to be one type of the thermocouple (13 types), the platinum resistance temperature sensor (2 types), voltage (5 types) and the electric current (1 type). (Modification of setting with parameter)

Sampling period

Realized acceleration in 200mS

Utilizes a liquid crystal display

- 1) The indication range has been extended to present 5 columns
- ②Actualized the various indication with 11 segments
- 3 Adopted LED to back light

PV color auto-change

Display color of Process value (PV) can be optionally set from Red, Orange and Green as compare with Setting value (SV).

Compact size

Depth is compact size, TTM-204 is only 55mm, and TTM-205, 207 and 209 are also only 65mm.

Loader communication function

The best for the setup work of a parameter Cable: Option (sold separately)

Software: Free option ---- It can download from our web site

Abundant output type

Relay contact, SSR-driving, Open collector, Voltage (5 types) and Electric current

Substantial option function

①CT input (Max. of 2 points) ②Event input (Max. of 4 points) ③Event output (Max. of 7 points. However, when 7 points are used, you can not use the control output.)

External standards

We have acquired "CE", "UL" and cUL.

● Protection structure (Available only for TTM-204)

Corresponding to "IP66"

Valve position proportionality control

The function carries out valve position proportionality control without feedback resistance

●Two choices of case colors (Available only for TTM-204)

"Black" or "Gray" choice is possible to preference

Blind function

The system can be configured so that only specific, selected parameters are displayed from set of parameters.

Simple timer function (independent three points)

The order of "After the defined time period passes, the control starts or stops" can be controlled by one unit.

Also use by the timer independent is possible. (Event output ON/OFF)

Priority screen

Without showing a parameter screen, a display and a setup can be performed by indicating a necessary parameter screen on the operation mode screen. (Maximum of 16 screens)

Digital PV filter

Corresponding to the sudden change of input value, it can apply the filter with the software

Manual control

A manual output function enables application of various instrumentation systems

● Communication function (RS485: An exclusive protocol / MODBUS)

The range extends up to the distance of 500m, and can connect up to 31 units concurrently.

With one host computer, it can remote consolidate watching "The collection of the data" and "Change of each setting value" at the place where it is far.

Soft-start function

When the power supply is turned on, limitation can be put on manipulated value during specific time in PID control.


Delay timer (Available only ON/OFF control)

It is possible to make the action of control output (Main or auxiliary) delay during specific time (setting). This can be used to protect the freezer.

Loop Error

This monitors the measured values and operation time in order to detect errors in the control loop.


■Front Panel

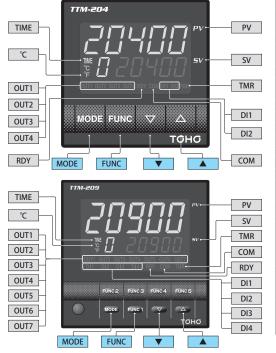

OUT1	Output1 monitor (It appears when output)
OUT2	Output2 monitor (It appears when output)
OUT3	Output3 monitor (It appears when output)
OUT4	Output4 monitor (It appears when output)
OUT5	Output5 monitor (It appears when output)
OUT6	Output6 monitor (It appears when output)
OUT7	Output7 monitor (It appears when output)
RDY	RDY lamp (It appears in the state of Ready)
COM	COM lamp (It blinks during communication)
DI1	DI1 monitor (It appears when DI1 operates)
DI2	DI2 monitor (It appears when DI2 operates)
DI3	DI3 monitor (It appears when DI3 operates)
DI4	DI4 monitor (It appears when DI4 operates)
TMR	TIMER lamp (It appears when timer operates)
TIME	It appears when the setting is "Timer"
°C/°F	It appears when the setting is "Temperature"
PV	Measured value indication, Character
F V	indication, Timer set-up time indication
SV	Set value indication, Operation quantity indication, Timer remaining time indication
MODE	Mode key
MODE	It is used when changing a screen.
FUNC	Function key
	It executes the function that is set
	Up key
	It is used when making a setting value increase It is used when changing input setting mode
	3 3 1 3
	Down Key
	It is used when making a setting value decrease It is used when changing parameter screen
	3 31
	nt available for TTM-207

% OUT6 is not available for TTM-207.

■Operation flow

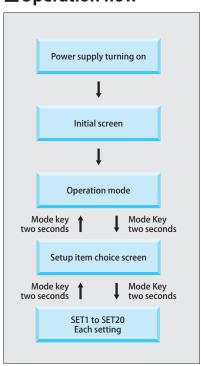



■Standard specifications

Input type	Thermocouple	K, J, T, E, R, S, B, N, U,	L, WRe5-26, PR40-20, PL	II (Input resistance 1M:	Ω)	
	RTD	Pt100, JPt100				
	Electric current / voltage	4 to 20mADC (Input r	esistance 250Ω), 0 to 1\	/DC, 0 to 5VDC, 1 to 5V	/DC, 0 to 10VDC, 0 to 10mVDC (Input resistance 1MΩ or more)	
ndication	PV/Character indication		LED back light, luminous	s colors are Red, Orang	e and Green)	
LCD Indication)		TTM-204/205 5 digits, height 10mm				
		TTM-207 5 digits, height 13mm TTM-209 5 digits, height 20mm				
	SV/Setting indication	TTM-209 5 digits, height 20mm LCD indication (with LED back light, luminous color is Red)				
	3V/Setting indication			s color is Rea)		
		TTM-204/205 5 digits, height 8mm TTM-207 5 digits, height 10mm				
	Auxiliary indication part		LED back light, luminous	s color is Green)		
	Adamary materion part		digit, height 8mm	o color is diccily		
			digit, height 8mm			
		TTM-209 1 digit, height 10mm				
	Each functional indication	Red (OUT1, OUT2, OU	T3, OUT4, OUT5, OUT6,	OUT7, DRY, COM, DI1, I	DI2, DI3, DI4, TMR)	
	PV color auto-change	Luminous color Red, Orange and Green				
		Luminous color	Temperature input	0.0 to 999.9 or 0 to 9	99 (℃)	
		change range	Analogue input	0 to 9999 (digit)		
ontrol	PID	Proportional band (P	1)	0.1 to 200.0% of set I	limiter span	
	(With auto tuning)	Proportional band sid	le of Output 2 (P2)	0.10 to 10.00 times (F	Per main control proportional band)	
	(With self tuning)	Integration time (I)		0 to 3600seconds (w	ith "0" integral action OFF)	
		Differentiation time (D)	0 to 3600seconds (w	ith "0" derivative control action OFF)	
		Proportion cycle (T1,	T2)	0.1 to 120.0 seconds		
		Dead band (DB)		Temperature input	-999.9 to 999.9 or -999 to 999 (°C)	
				Analog input	-9999 to 9999 (digits) {The decimal point position is the specified position.}	
	ON/OFF	Control sensitivity (C	1, C2)	Temperature input	0.0 to 999.9 or 0 to 999 (℃)	
				Analog input	0 to 9999 (digits) {The decimal point position is the specified position.}	
	Output 1 and 2 Off point	Position selection set	ting	SV unit setting High/		
		Positional setting		Temperature input	-999.9 to 999.9 or -999 to 999 (°C)	
				Analog input	-9999 to 9999 (digits) {The decimal point position is a specified position.}	
ontrol output	Relay contact	250VAC 3A (Resistano	e load) 1a contact point	Minimum load 5VDC	100mA	
	SSR-driving voltage	0 to 12VDC (Load resi	stance 600Ω or more)			
	Open collector	24VDC 100mA				
	Current / voltage	4 to 20mADC (Load re	esistance 600Ω or less)			
	Voltage	0 to 1VDC (Load resis	tance 500KΩ or more), (0 to 5VDC (Load resista	ance 1KΩ or more), 1 to 5VDC (Load resistance 1KΩ or more)	
		0 to 10VDC (Load resi	stance 1KΩ or more), 0	to 10mVDC (Load resis	stance 500KΩ or more)	
ampling cycle		0.2 seconds				
etting and instruction	Thermocouple	K, J, T, E, R, S, B, N		Larger one ± (0.3%+	1digit) of the instruction value or ±2°C (23°C ±10°C)	
ccuracy					C is $\pm 3^\circ\mathrm{C}$, and -200 to -100 $^\circ\mathrm{C}$ is $\pm 4^\circ\mathrm{C}$. As for 400 $^\circ\mathrm{C}$ or less of B thermocouple the	
n ambient temperature 23°C : 10 degree)				is no stipulation	4 11 11) full 1	
- ro degree,		U, L			1 digit) of the instruction value or $\pm 4^{\circ}$ C (23°C $\pm 10^{\circ}$ C) Less than 0° C is $\pm 6^{\circ}$ C.	
		WRe5-26		Larger one \pm (0.6%+1digit) of the instruction value or \pm 4°C (23°C \pm 10°C)		
		PR40-20 PL II		$\pm 9.4^{\circ}$ C ± 1 digit. There is no precision stipulation under 800° C Larger one $\pm (0.3\% + 1$ digit) of the instruction value or $\pm 2^{\circ}$ C		
	DTD				•	
	RTD	Pt100, JPt100		Larger one \pm (0.3%+1digit) of the instruction value or \pm 0.9°C (23°C \pm 10°C) \pm 0.3% \pm 1digit of set limiter span (23°C \pm 10°C)		
	Current/voltage	0 to 1VDC, 0 to 5VDC	C 44- 20 ADC	±0.3% ± raigit of se	t limiter span (23 C ± 10 C)	
		1 to 5VDC, 0 to 10VD0	L, 4 to 20mADC	+ 0.50/ + 1.11/2/2 - 5 - 2.11/2/2 - 1.00° - 1.		
		0 to 10mVDC		±0.5%±1digit of se	t limiter span (23°C±10°C)	
Memory element		EEPROM				
nput power supply			, +10%), 50/60Hz, 24VA			
Veight			205:210g TTM-207:26			
ower consumption					TTM-205/207/209 less than 11VA (100 to 240VAC), less than 5W (24VACDC)	
ccessories			anual and Attachment (A	A handling description	is sold separately.)	
tandard Range of surrounding Compensating range such as p		23°C±10°C, 45 to 75	% RH			
ange of use surroundings temp		0 to 50°C , 20 to 90%	PH (Avoid dowings)			
	,		winess and freezing), 5 t	to OEO/ DII/Avaid davi	in and	
ange of preservation surround						
unction	Manipulated variable limiter (MLH1, MLL1, MLH2, MLL2)	Upper limit (MLH1, M	LIIZ)	Digital output	MLL1 to 100.0 (%), MLL2 to 100.0 (%)	
	(LITT, WILL I, WILLIZ, WILLZ)	Lourer limit (MLL1 MLL2)		Analogue output	MLL1 to 110.0 (%), MLL2 to 110.0 (%)	
		Lower limit (MLL1, MLL2)		Digital output	0.0 to MLH1 (%), 0.0 to MLH2 (%)	
	Hanna Bartelanna P. J. at. 6	0.04- 540.0 (01) /5	OFF I 2 22/1	Analogue output	-10.0 to MLH1 (%), -10.0 to MLH2 (%)	
	Upper limit lower limit setting of manipulated variable change limiter	0.0 to 549.9 (%) (Fund	tion UFF by 0.0%)			
	Abnormal time manipulated variable	Digital output	0.0 to 100.0 (%)			
	setting	Digital output				
	Setting limiter (SLL, SLH)	Upper limit (SLH)	.0.0 to 110.0 (70)	Temperature input	(SLL + 5.0) to SV setting range upper limit, (SLL + 5) to SV setting range upper limit (°C)	
	setting innited (SEE, SEH)	Opper mint (SLII)		Analogue input	(SLL + 5.0) to SV setting range upper limit, (SLL + 5) to SV setting range upper limit (C)	
		Lower limit (SLL)		Temperature input	SV setting range lower limit to (SLH - 5.0), SV setting range lower limit to (SLH - 5) (°C)	
		LOWER MINE (JLL)		Analogue input	SV setting range lower limit to (SLH - 5.0), SV setting range lower limit to (SLH - 5) (C)	
	Control mode (MD)	Control ston control	heginning manual cont		timer2 operation, and timer3 operation	
	Control mode (MD) Control types (CNT)	PID type	~~gy, manuai cont	Type A (Normal PID o		
	control types (CIVI)	, io type		Type B (Over-shoot p	71 -	
		Type P mede		Over-shoot protection	urbance protection type)	
		Type B mode				
				Over-shoot protection Middle		
		N 1 1 11		Over-shoot protection Strong		
		Normal reverse action	setting	Reverse action		
		Tourism to 127		Normal action	Lie DID / codel consequently code control	
		Tuning type setting		Main auto-tuning (Main PID/position proportionality control)		
				Main self-tuning (Main PID/position proportionality control)		
					g (Main PID/auxiliary PID)	
					(Main PID/auxiliary PID)	
				Main/auxiliary auto-1	tuning (Main PID/auxiliary PID)	
	Output gain setting (MV1G, MV2G)	0.0 to 1000.0 (%)				
	PV correction, 0 point setting (PVS)	Temperature input		-999.9 to 999.9 (°C)		
		Analog input		-9999 to 9999 (digit)		
	PV correction, gain setting (PVG)	0.500 to 2.000 (times)			
	PV input filter (PD)	0.0 to 99.9 (seconds)				
	Anti reset windup	0.0 to 110.0 (%) (Function OFF by 110.0% setting)				
	Manual reset (PBB)		.0 to 100.0 (%) if there is			
	Loop abnormal time setting	Main control loop abo		0 to 9999 (seconds)		
	,		abnormal time setting	0 to 9999 (seconds)		
		, ,				

■Standard specifications

	Timer driving mode (TMF)	Three points. 0 minute and 00 second to 99 minutes and 59 seconds. 0 hour and 00 minute to 99 hours and 59 minutes. Timer repetition frequency: 0 to 99 times (With 0 unlimited frequency) Accuracy: ±(1.5%+0.5 seconds) of setting time				
		Function: Auto start, Manual start, Event s	tart, SV start, DI start			
	Delay timer (FDT)	0 to 99 (minutes) Main/auxiliary common	0 to 99 (minutes) Main/auxiliary common			
	Decimal point movement (DP)	Indication below decimal point. Yes/No	Indication below decimal point. Yes/No			
	Manual control	Manual control is possible. (Balance-less /	Bump-less)			
	RUN/READY	Switching of RUN/READY is possible.				
	Blind function	An optional parameter screen can be set u	p in the non-indication	i.		
	Auto tuning coefficient (ATG)	0.1 to 10.0 times				
	Auto tuning sensitivity (ATC)	Temperature input	0.0 to 999.9 or 0 to 99	99 (℃)		
		Analog input	0 to 9999 (digits)			
	Function key	A function key can be chosen from "Figure	A function key can be chosen from "Figure movement", "MD/ready", "AT start/stop", "Timer start/reset", "Reverse screen turning", "ENT", "Bank change"			
		and "Auto/manual change". Settlement of	and "Auto/manual change". Settlement of push time (0 to 5 seconds)			
	Priority screen	An optional parameter screen can be indic	An optional parameter screen can be indicated in the operation mode. (Maximum of 16 points)			
	Lock function (LOC)	Four modes (OFF, ALL Lock, Operation mo	Four modes (OFF, ALL Lock, Operation mode lock, and lock except operation mode)			
	Self-diagnostic function	EEPROM data check (Err0), A/D converter action check (Err1), auto-tuning check (Err2), watch-dog timer equipped				
	Ramp function	Action	When modify SV, set up the SV variation per minute			
		Setting range	Temperature input	0.0 to 999.9°C/minute (Ramp function turns OFF by 0.0)		
			Analog input	0 to 9999 digit/minute (Ramp function turns OFF by 0)		
		Setting unit	Temperature input	0.1°C/minute		
			Analog input	0.1 digit/minute		
	Valve function	Motor stroke time	0.1 to 999.9 (seconds)			
		Motor drive dead band	0.0 to 100.0 (seconds)			
	Initialization mode		Password setup, blind screen one time call setup, setting value backup and set value initialization Since a password is required for this mode when making a setting change, please be sure to keep the password.			
	Bank setting	Setting the parameter of set 1 to 17 (A ma	ximum of 16 points)			
	Soft-start (Main control)	Output setting				
		Time setting	00:00 to 99:59 (minutes), Function OFF by 00:00 (minutes)			

■Option specifications

Auxiliary output	Relay contact	250VAC 1A (resistan	ce load) 1a contact point		
(2 points)	Open collector	24VDC 100mA	te load, la contact point		
(Common	Setting range (Upper and Lower	Temperature input	-1999.9 to 2999.9、-19999 to 29999 (°C)		
Terminal)	limit)	Analog input	-19999 to 29999 (digit)		
	Sensitivity	Temperature input	0.0 to 999.9、0 to 9999 (°C)		
	Sensitivity				
	Delever's and	Analog input 0 to 9999 (seconds)	0 to 9999 (digit)		
Dilimont	Delay timer		CADV with the Annual Capable along a formula and a standard and a formula December Annual Capable Annual Capabl	A MA	
DI input (Max. 4 points)	Function	Forward action swite	ch (At the time of contact point closing is Forward action)	to/Manual switch (At the time of contact point closing is Manual), Reverse action/	
	1	Auto tuning STOP/START (At the time of contact point closing is Auto tuning Start), Timer STOP/START (At the time of contact point closing START)			
	Input specification		point. Active switching is possible at the time of the input.		
	Minimum input time	200mS			
	When ON electric current	Maximum 10mADC			
	When OFF electric current	Maximum 6VDC			
	Terminal permission resistance		333Ω, When OFF: Minimum 500KΩ		
CT input (2 points)	Measurement electric current range	0.0 to 50.0A			
(2 points)	Setting electric current range		resolution 0.1A). However, the function is turning off at 0.0.		
	Setting accuracy	±5% (0.1A or less is			
	Wire break detection	ON time of control o			
	Welding detection	OFF time of control	output above 300mS		
Communication		Communication		Loader communication	
	Communication standard	RS-485 (1:31)		TTL (1:1)	
	Communication terminal	Terminal stand		Loader communication private terminal	
	Protocol	TOHO exclusive protocol/MODBUS (RTU)/MODBUS (ASCII)		TOHO exclusive protocol/MODBUS (RTU)/MODBUS (ASCII)	
	Direction of information	Half duplex		Half duplex	
	Synchronous system	Asynchronous		Asynchronous	
	Transmission code	ASCII		ASCII	
	Interface	RS-485 (two lines)		TTIL level	
	Transmission speed	2400, 4800, 9600, 19	200, 38400bps	2400, 4800, 9600, 19200, 38400bps	
	Communication distance	500m			
	Response delay time	0 to 250mS		0 to 250mS	
	Communication switch	Writing is impossible	e/Writing is possible/Simultaneous temperature rise master/Si	multaneous temperature rise slave.	
	Character	Start bit: 1 bit fixatio	n	Start bit: 1 bit fixation	
		Stop bit: 1/2 bit		Stop bit: 1/2 bit	
		Data length: 7/8 bit * MODBUS: In case o In case of RTU 8 b	f ASCII 7 bits fixation its fixation	Data length: 7/8 bit * MODBUS: In case of ASCII 7 bits fixation In case of RTU 8 bits fixation	
		Parity: No/Even num	ber/Odd number	Parity: No/Even number/Odd number	
		BCC check: No/Yes	BCC Check is invalid	BCC check: No/Yes * In case of MODBUS BCC Check is invalid	
	Address: 1 to 99 stations * In case of MODBUS 1 to 247 stations	Address: 1 to 99 stations * In case of MODBUS 1 to 247 stations			
Transmission output	Functional setting			ble) output, MV2 (Secondary manipulated variable) output. Reciprocal change	
		Temperature input Scaling low limit to 2999.9 (°C), scaling low limit to 2999 (°C)			
		Analogue input Scaling low limit to 29999 (digit)			
		Temperature input 1-1999.9 to scaling high limit (°C), -1999 to scaling high limit (°C)			
		Analoque input 1-1999 to scaling high limit (digit)			



■Option Specifications (Continued)

Remote SV Input	Input Type (Current/Voltage Multi-Input)	0 to 1VDC, 0 to 5VDC, 1 \sim	5VDC, 0 to 10VDC, 4 to 20mADC
	Measurement/Range of Setting	-19999 to +29999 (deci	mal point can be set at any location)
	Range of Display (Full Scale: Range	0 to 1VDC, 0 to 5VDC,	High Limit: +12% of full scale
	of FSL2 to FSH2)	0 to 10VDC	Low Limit: Maximum of — 2% of full scale
		1 to 5VDC, 4 to 20mADC	High Limit: +12% of full scale
			Low Limit: — 12% of full scale
	Resolution	±0.3% of full scale + 1 dig	git
	Display scaling	High Limit (FSH2): FSL2 to	29999 (digit)
	High limit (FSH2)/Low limit (FSL2)	Low Limit (FSL2): -19999	9 to FSH2 (digit)
	Display Resolution Performance	20000 or less	
	PV Correction Zero-Point Setting (PVS2)	-9999 to 9999 (digit)	
	PV Correction Gain Setting (PVG2)	0.500 to 2.000 (Multiple)	
	PV Input Filter (PDF2)	0.0 to 99.9 (seconds)	
	Local/Remote Switch	Local, remote 1 (scaling w	rith SLL1 and SLH1)
		Remote 2 (scaling with FS	SL2 and FSH2)

■Input and scale range

Thermocouple		Measurement/measurement range	Indication resolution
K	℃	-200.0 to 1372.0	1℃∕0.1℃
J	°C	-200.0 to 1200.0	1℃∕0.1℃
T	°C	-200.0 to 400.0	1℃∕0.1℃
E	℃	-200.0 to 1000.0	1℃∕0.1℃
R	°C	-50.0 to 1768.0	1℃
S	°C	-50.0 to 1768.0	1℃
В	°C	-0.0 to 1800.0	1℃
N	℃	-200.0 to 1300.0	1℃∕0.1℃
U	°C	-200.0 to 400.0	1℃∕0.1℃
L	°C	-200.0 to 900.0	1℃∕0.1℃
WRe5-26	℃	0.0 to 2300.0	1℃
PR40-20	°C	0.0 to 1880.0	1℃
PLII	°C	0.0 to 1390.0	1℃∕0.1℃

	RTD		Measurement/measurement range	Indication resolution
	Pt100 (JIS/IEC)	℃	-200.0 to 850.0	1℃∕0.1℃
ĺ	JPt100 (JIS)	°C	-200.0 to 510.0	1℃∕0.1℃

Current and voltage	Measurement/measurement range	Indication resolution
0 to 1VDC		
0 to 5VDC		
1 to 5VDC	-19999 to 29999 Indication width is less than	A decimal point position can
0 to 10VDC	20000.	be changed arbitrarily.
0 to 10mVDC		
4 to 20mADC		

■Output connection setting

Main output
Auxiliary output
Event output
RUN output
RDY output
Timer1 output
Timer1 output at on delay
Timer1 output at off delay
Timer1 output at on + off delay
Timer2 output
Timer2 output at on delay
Timer2 output at off delay
Timer2 output at on + off delay
Timer3 output
Timer3 output at on delay
Timer3 output at off delay
Timer3 output at on + off delay
Transmission output (When OUT1 and OUT2 are analogue output)

■Timer drive mode

Start mode

1	Auto start
•	
2	Manual start
3	SV start
4	DI1 start (Possible to set when option is equipped)
5	DI2 start (Possible to set when option is equipped)
6	DI3 start (Possible to set when option is equipped)
7	DI4 start (Possible to set when option is equipped)
8	Event 1 start
9	Event 2 start
10	Event 3 start (Possible to set when option is equipped)
11	Event 4 start (Possible to set when option is equipped)
12	Event 5 start (Possible to set when option is equipped)
13	Event 6 start (Possible to set when option is equipped)
14	Event 7 start (Possible to set when option is equipped)

^{*}Each Start has ON delay/OFF Delay

ON delay: After time-up control stop or event output OFF OFF delay: After time-up control stop or event output ON

■Point of contact output mode

Event function 1

	Function
0	No
1	Deflection upper and lower limit
2	Deflection upper limit
2 3 4	Deflection lower limit
Ч	Deflection range
5	Absolute value upper and lower limit
5 7 8	Absolute value upper limit
7	Absolute value lower limit
8	Absolute value range
	Addition function
0	No
1	Maintenance
2 3	Standby sequence
3	Delay timer
Ч	Maintenance + Standby sequence
5	Maintenance + Delay timer
Б	Standby sequence + Delay timer
7	Maintenance + Standby sequence + Delay timer
	ontrol linkage function
<i>0</i>	All mode
1	RUN/MAN mode only
2	RUN mode only

Event function 2 (PV abnormal)

	Function		
0	No		
/ Exsist			
	Addition function		
0	No		
1	Maintenance		
2	Delay timer		
3	Maintenance + Delay timer		
(Control linkage function		
0	All mode		
1	RUN/MAN mode only		
2	RUN mode only		

Event function 3 (CT abnormal)

	Function						
0	☑ No						
- [CT1 abnormal						
2	CT2 abnormal						
3	CT1 abnormal + CT2						
١	abnormal						
	Addition function						
0	No						
1	Maintenance						
2	Delay timer						
3	Maintenance + Delay						
כ	timer						
C	ontrol linkage function						
0	All mode						
- 1	RUN/MAN mode only						
2	RUN mode only						

Event function 4 (Loop wire break)

	Function							
O	☐ No							
1	/ Exsist							
	Addition function							
O	No							
/ Exsist								

^{*}Event polarity function available

$\textbf{Output functional allotment} \quad (\bigcirc: \textbf{Allotment is possible}, \ \times: \textbf{Allotment impossibility})$


Output types	Control	output	Auxiliary output					
Output types	Output1	Output2	Output3	Output4	Output5	Output6	Output7	
Main output (Heating)	0	0	0	0	0	0	0	
Auxiliary output (Cooling)	0	0	0	0	0	0	0	
Transmission	0	0	×	×	×	×	×	
Event output	0	0	0	0	0	0	0	
Timer output	0	0	0	0	0	0	0	




■Wiring

*Please use less than 6mm width terminal

TTM-204

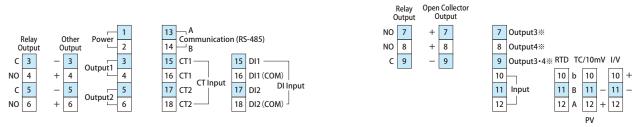


TTM-205, 209

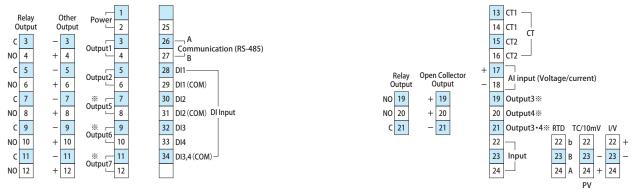

^{*} Output 3 to 7 (Terminals 19 to 21 and 7 to 12) are possible to select from either relay output or open collector.

TTM-207

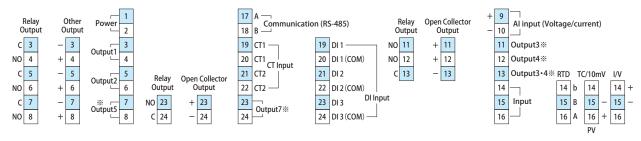


[#] Output 3 to 5 and 7 (Terminals 11 to 13, 7 to 8, 23 to 24) are possible to select from either relay output or open collector.

■Terminal explanation


Communication	Please connect the terminal of A and B rightly. (Please use a converter when it is not RE-485)						
Output (Right reverse	Relay point of contact	C: Common, No: Normal open					
change is possible)	SSR driving	Please connect directly with INPUT+ and - by the side of SSR.					
	Transmission, Open collector Please be connected to polarity of + and - care						
СТ	Please connect a specified current transformer directly. (CTL-6-P-H)						
PV input/ Al input	Thermocouple	Please be connected to polarity of + and - with care					
	Current/ Please be connected to terminals A, B and b with voltage care						
DI	COM: Common (The polarity can be switched)						
Al input	Please be connected to polarity of + and - with care						


■Dimensions

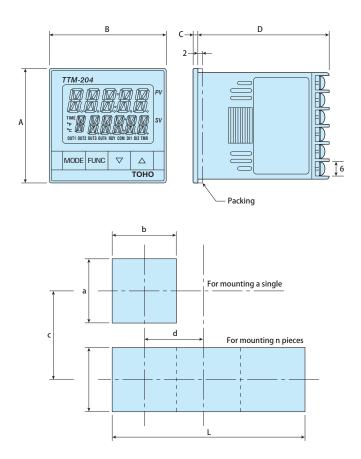

Model	a		b		С	d	Α	В	С	D	L	
TTM-204	45	+0.6 -0	45	+0.6 -0	60	48	48	48	2	55	(Bxn-3)	+0.6 -0
TTM-205	92	+0.6 -0	45	+0.6 -0	120	48	96	48	2	65	(Bxn-3)	+1 -0
TTM-207	68	+0.6 -0	68	+0.6 -0	90	72	72	72	2	65	(Bxn-3)	+1 -0
TTM-209	92	+0.6 -0	92	+0.6 -0	120	96	96	96	2	65	(Bxn-3)	+1 -0

■Panel Installation

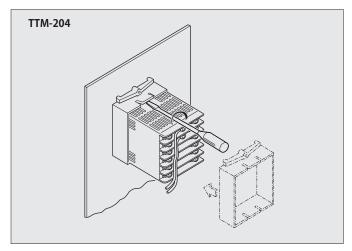

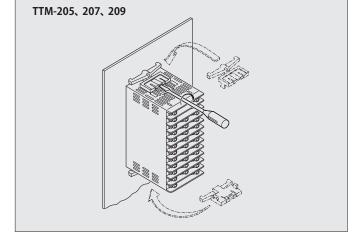


 $[\]ast \mbox{For this panel installation, please be careful sufficiently to avoid any of damage.}$




■Advanced Features

●PID control by new algorithm

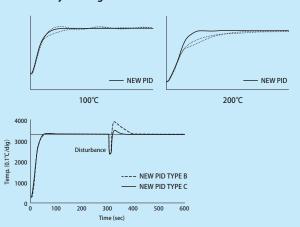

BLIND Function Setting

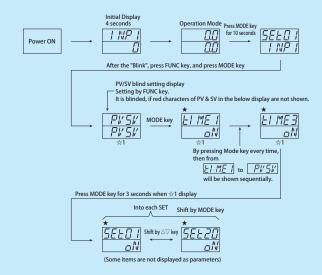

Content of the above ★


- 1) In BLIND MODE, either <code>「ON」</code> & <code>「OFF]</code> is displayed on under each characters (SV display). <code>「ON」</code> is displayed. <code>「OFF」</code> is not displayed (BLIND).
- 2) To change characters in BLIND MODE by pressing $\lceil \mathsf{FUNC} \rfloor$ key.
- 3) Power OFF for end of BLIND setting mode.

It is possible not to make the optional picture indicate by the key operation

In addition, please note that only measured value is displayed without displaying a setting value in the case of the usual display when the SV setup screen is turned off.

●OFF point position movement of ON/OFF control

When the OFF point position movement is set to 0, the OFF point is the set value position.

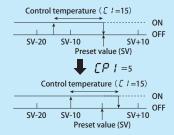

This is when off point position movement is set up with (+5).


Actually specification, there is no description change as above, but move above equal to (+5) as a position of ON/OFF.

Case it made move on negative side, the OFF point moves to opposite side to description above.


Timer function

- 1. In the case of bread baking oven
- •Put dough in the oven, and push the start key to the timer.
- •The temperature is controlled by the heater and so on for the timer setup time.
- ●After timer count end control is stopped automatically

(It is used when making control STOP after the timer count ends.)

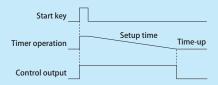


- 2. In case of packing machine and industrial machine, which control is started after the completing the preparation of the peripheral device
 - ●The count of the timer begins from point that turns on the power supply.
 - ●The control output stops during timer setting time
- ●The control starts automatically after the timer count ends.
 (It is used when making control starts after the timer count ends.)

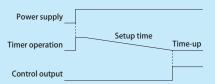

Communication function

 A connection example with the personal computer
 Centralized supervision with the personal computer is possible with the connection like the chart below.

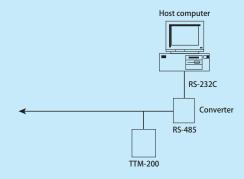

Loader communication



**Loader cable specification

[Appearance and structure]



[Standard and performance]

USB I/F standard	USB Specification 2.0 Conforming			
DTE (Personal computer side) speed	Up to 38400bps			
Connector specification	Personal computer side: USB			
	Temperature Controller side : φ 2.5mm Stereo plug			

[Model]


TTM-LOADER

Digital PV filter

It is the function to realize the CR filter effect on the software by performing primary delay operation to the measured value (PV)

The effect of the filter can be set by the time constant.


(Time constant is the time that the PV value reaches up to about 63% when the input changes on the step.)

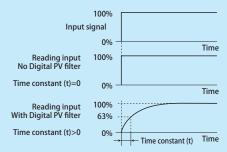

The use of Digital PV filter

- 1) Removal of high frequency noise --- The influence of a noise when an electric noise joining an input is mitigated.
- 2) A response can be delayed against the sudden change of the input.

Self-tuning PID

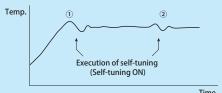


- ①At the time of setting value change ②At the time of the temperature change by disturbance,
- and at the time of hunching generating

• Auto (RUN) / Manual function

The auto control and the manual control, they can be switched by the front key. Manual operation is the function that is not concerned with the situation of a deviation, but can set up and output the output for control arbitrarily (manipulation variable).

The system can be operated manually in the time of the system trial run and so on, when to check of final control element (a valve, heater, etc.) of operation is performed, when the sensor breaks down by any chance, or when usual control can't be done

There is the Balance-less Bump-less function, which holds down sudden change of control output when switching the automatic control and manual control mutually. Furthermore, it stops damage on the peripheral equipment by sudden change and the bad influence to a control system. So, you can operate in comfort.

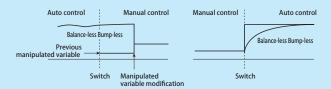

Balance-less Bump-less

Ramp function


The ramp function is a matter of function made to have inclination against the change in SV (Setting value).

As actual operation, the setting value of a dummy is made to change gradually toward the setting value after changing. Then it controls to the setting value of the dummy.

The amount of change for around one minute of SV is set up.

When a rapid change of the control result is not allowed with the characteristic of the control subject, and when the change course (inclination) of the control result becomes important in a control subject, the effect of a ramp function is demonstrated, the effect of the ramp function is demonstrated.

In addition, since only SV is changed, the result expected may not be obtained when it expects great influence to PV (measured value).

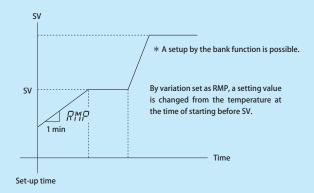


Simultaneous temperature rise function

■Simultaneous temperature rise

• When simultaneous temperature rise control is exerted by multi-channels using the RS-485 communication function, a master and slave are determined beforehand. This permits reaching the respective goal values at the same time regardless of the characteristic of each channel.

The channel, in which the time from the start of control to the reach to the goal value is the longest, is specified as a master. The other channels are specified as slaves.

• The simultaneous temperature rise function is started at the start of run (including the power ON time) or a change of setting value, and is ended when the master reaches the goal value.

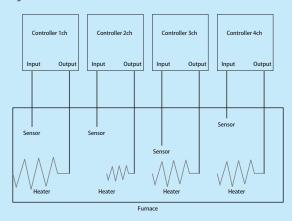

- 1. Perform communication protocol settings to the TOHO protocol.
- 2. In the communication changeover setting, set the channel, in which the temperature reaches the goal value latest, to the simultaneous temperature rise master, and then set the other channels to the simultaneous temperature rise slaves.
- 3. Set the main control sensitivity.

During a simultaneous temperature rise, the slave side exerts ON/OFF control for the current temperature of the master. Accordingly, set the sensitivity to a level that does not cause chattering.

Note: Precautions on use

- 1. Perform auto tuning for each channel as required.
- 2. When using the simultaneous temperature rise function, do not perform communication with the outside.




Bank function

 $8\ banks$ each with $16\ setting$ that can be changed as optional parameter.

A desired state can be reached by adjusting the bank setting, but without modifying the temperature setting or valve of the PID.

This can be done by setting up a parameter for an applicable bank that references the temperature control for one unit.

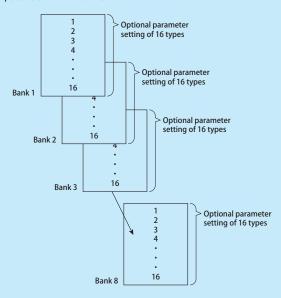


Remote SV

Signals from external sources become the controller parameters.

• Cascade control using remote SV

Cascade control is where the control signal for a single controller is applied to other controllers, and the controller that receives control signals from an external source convert those signals into parameters for control purposes.


As shown in the illustration above, cascade control can be achieved with the use of two controllers.

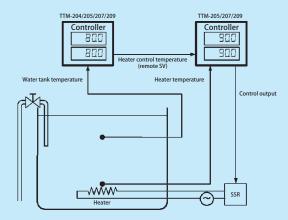

Position proportional control

■Position proportional control

- According to the operation amount required for PAD control, the valve opening is changed by outputting an open signal or close signal to the valve on the basis of the valve motor stroke time, so that the flow rate is adjusted, thereby controlling the target temperature. The control can be exerted without feedback resistance.
- The valve motor stroke time means the time from the full opening of the valve till its full closing.

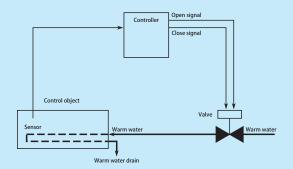


· Valve motor drive dead band

In position proportional control, the open signal or close signal is output so that the operation amount of the regulator may agree with the opening of the valve.

It is necessary to refrain from performing an open/close changeover operation frequently in consideration of the service life of the valve.


A dead band is provided at the open signal/close signal output changeover point. In this area, both open signal output and close signal output are stopped to reduce frequent open/close changeover operations.

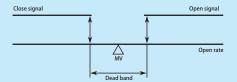

• Initial opening after the end of AT

It is possible to set the operation amount just after the end of auto tuning in order to restrict undershoot just after this end.


Example) Response after the end of AT

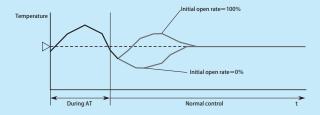

Heating and cooling



■Ordering Information (Model Configurations)

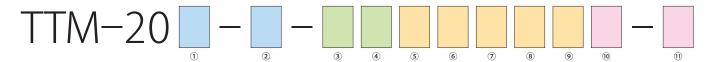

1	Model 4 48×48									
			5	96×48						
			7	72×72						
			9	96×96						
2	Case color		Q	Black						
	X			Gray (Only selected with 204)						
3	Output 1		N	No J Voltage 0 to 5VDC						
			R	Relay point of contact	F		Voltage 1 to 5VDC			
			Р	Voltage for SSR driving	for SSR driving		Voltage 0 to 10VDC			
			А	Open collector		I	Current 4 to 20mADC			
			K	Voltage 0 to 1VDC		Н	Voltage 0 to 10mVDC			
4	Output 2		N	No		J	Voltage 0 to 5VDC			
			R	Relay point of contact		F	Voltage 1 to 5VDC			
			Р	Voltage for SSR driving		G	Voltage 0 to 10VDC			
			Α	Open collector		I	Current 4 to 20mADC			
			K	Voltage 0 to 1VDC		Н	Voltage 0 to 10mVDC			
5	Output 3、4	A Open collector			entrellers on all models					
			R	Relay point of contact	Same for the remote controllers on all models					
6	Output 5, 6		Α	Open collector	Not selectable for 204					
			R	Relay point of contact	· · · · · · · · · · · · · · · · · · ·					
7	Output 7		Α	Open collector	Not selectable for 204					
			R	Relay point of contact Not selectable when W (event 3) has been by 207						
8	Al input		Υ		Remote SV input (voltage/current only) Not selectable for TTV-204					
9	Option	204 Selection	ST	CT1, 2						
			SV	CT1, event 2						
			UV	Event 1, 2						
		207 Selection	ST	CT1, 2						
			SV	CT1, event 2						
			UV	Event 1, 2						
			STW	CT1, 2 event 3 (output 7 not selec						
			SVW	CT1, event 2, 3 (output 7 not sele						
			UVW	Event 1, 2, 3 (output 7 not selecta	ble)					
		205, 209 Selection	ST	CT1, 2						
			SV	CT1, event 2						
			UV	Event 1, 2						
			SVW	CT1, event 2, 3, 4						
			UVW	Event 1, 2, 3, 4						
			STUV STUVW	CT1, 2 event 1, 2						
•				CT1, 2 event 1, 2, 3, 4						
10			М	Communications (RS-485)						
11)	Power Suppl	y		100 to 240V (free power)						
			L	24VAC/DC						

^{*} Parameters up to output 2 must be selected.

 \star Specifications apply in accordance with the sequence of selection for output 3 and upwards.

Example: TTM-209-Q-PR-RUVW

P: Output 1: SSR drive voltage

R: Output 2: Relay connection

R: Output 3, 4: Relay connection (does not select output 5 and 6)

UVW: EV1, 2, 3, 4

- *Output 3 and 4 must be selected when output 5 and 6 are required.
- *Output 3 and 4 and output 5 and 6 must be selected when output 7 is required.
- \star Option W only consists of event 3 when TTM-207 has been selected.
- *CTL-6-P-H is added when CT is selected. (2 are added when 2 CTs are selected.)
- *CT cannot be selected when only analog has been selected for the output.



Head Office: 1-13-21, Tanashioda, Sagamihara Kanagawa 229-1125 Japan.

Phone: +81-42-777-3311 FAX: +81-42-777-3751

E-Mail: overseas@toho-inc.co.jp Web site: http://www.toho-inc.co.jp